



PRODUCT ASSEMBLY INSTRUCTIONS:



www.wavearmor.net

Item # | Product Name: #300085 Dock Wheel Locking Collar

| Parts List: | Tools Needed: |
|----------------------------|-----------------|
| 1. 2" Locking Collar Qty 2 | 1. Allen wrench |
| 2. | 2. |
| 3. | 3. |
| 4. | 4. |
| 5. | 5. |

Assembly Instructions:

The locking collars may be used on the inside and the outside of the dock wheel. If there is no inside wheel stop on the axle the locking collar may be used for this.

Slide locking collar onto the axle to the proper position, leaving enough room for the dock wheel and the outside locking collar. Securely tighten the set screw on the locking collar against the axle. Next slide the dock wheel onto the axle and then the outside locking collar. Leave a small amount of room between the locking collar and the dock wheel so the wheel can turn freely. Securely tighten the set screw on the locking collar against the axle.

