



PRODUCT ASSEMBLY INSTRUCTIONS:




www.wavearmor.net

Item # | Product Name: #301096 Lowered Deck Section – Pebble Beach

Parts List:	Tools Needed:
1. 301078 Lower Deck Section	1. 9/16" socket
2. 300246 Prebagged hdwe qty 1	2. Ratchet
3.	3. Extension
4.	4. Mallet
5.	5. Marine friendly lubricant – WD40, Silicone-Food Grade preferred, or Pam cooking spray
6.	6.
7.	7.
8.	8.
9.	9.
10.	10.

Assembly Instructions:

1. Align lowered deck piece with the channel in the dock edge. Spray H-channel with lubricant to allow the piece to slide into place easier.

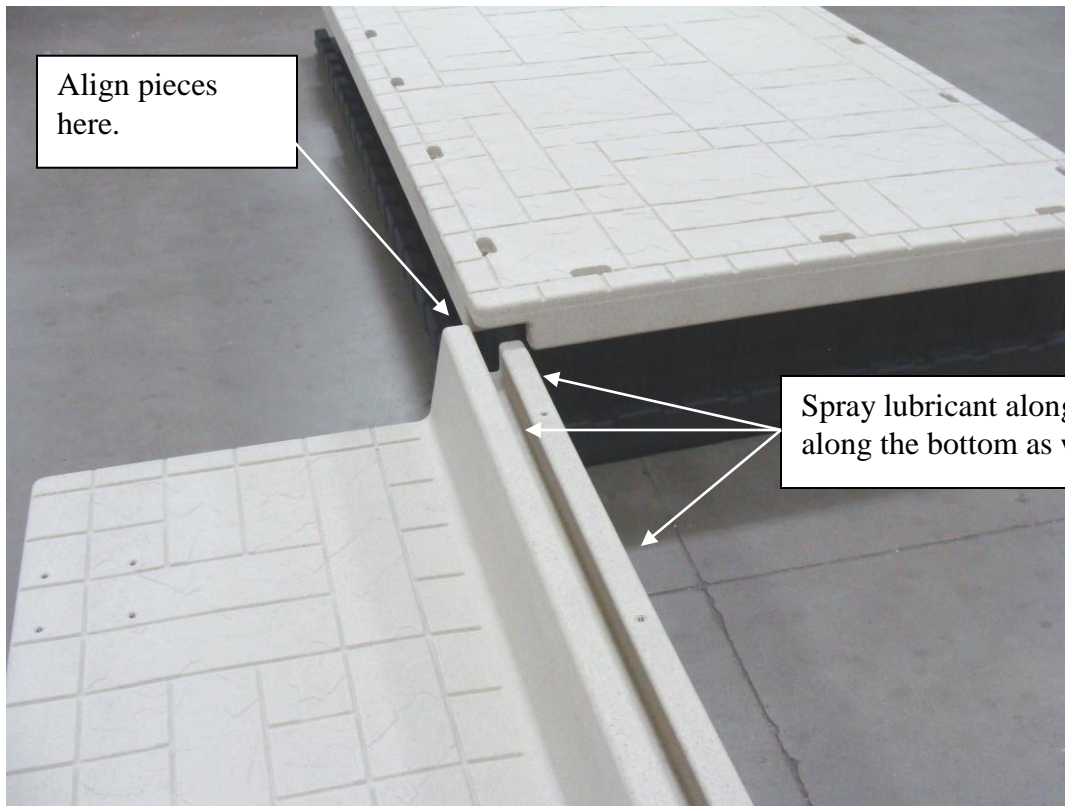

2. Slide lowered section into the dock channel. Slide it to the desired position and also be sure one of the threaded inserts aligns with the slot in the dock deck.



3. Secure the lowered section with the 3/8 x 1.5" bolt and washer. Installation is complete.

