


Item # | Product Name: #301103 & 301177 Small 10" Vertical Bumper for Wave Armor Dock

Parts List:	Tools Needed:
1. 301083 PBeach or 301178 Tan Small Vertical Bumper	1. Rubber Mallet or Hammer (Optional)
2. 300983 Hardware bag	2. 9/16 socket and ratchet
3.	3. Silicone spray or lubricant
4.	4.
5.	5.

Assembly Instructions:

Installing the small vertical bumper in the Wave Armor Dock.

1. Line up the bumper with the channel in the dock. Spray the bumper H connection with lubricant for easier installation if necessary. Use the mallet or hammer to tap the bumper into place.

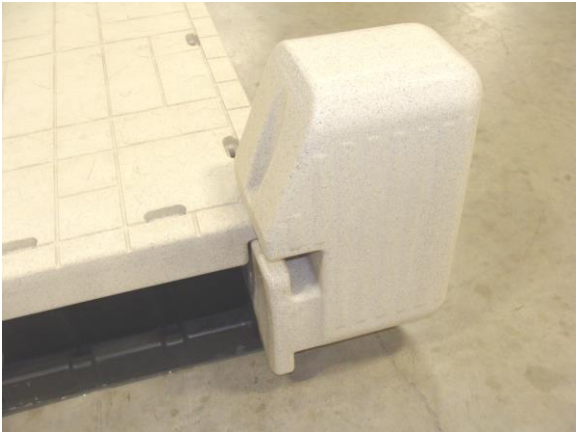

2. Align the bolt hole in the bumper with one of the slots in the dock at the desired location. The slots are approximately 20" apart. Secure with the 3/8 x 5" bolt and washer.

