



PRODUCT ASSEMBLY INSTRUCTIONS:


www.wavearmor.com

Item # | Product Name: 302507 Connector Kit Floating Dock to Pro Port Side

Parts List:	Tools Needed:
1. Plastic Bottom Connector qty 2	1. Ratchet and 9/16" socket
2. Plastic Top Connector qty 2	2. 3/4" wrench and 3/4" socket with ratchet
3. Galvanized Long Steel Bracket qty 2	3.
4. 1/2 x 7" bolt qty 2, 1/2" nylock nut qty 2, 1/2" washers qty 4	4.
5. 3/8 x 2" bolt qty 6, 3/8" lock washer qty 6, 3/8" heavy washer qty 6	5.
6.	6.
7.	7.

Assembly Instructions:

1. Insert bottom connector into the port as shown below. Insert top connector into the same hole and fasten securely with the 3/8 x 2 bolts, lock washers and heavy washers.

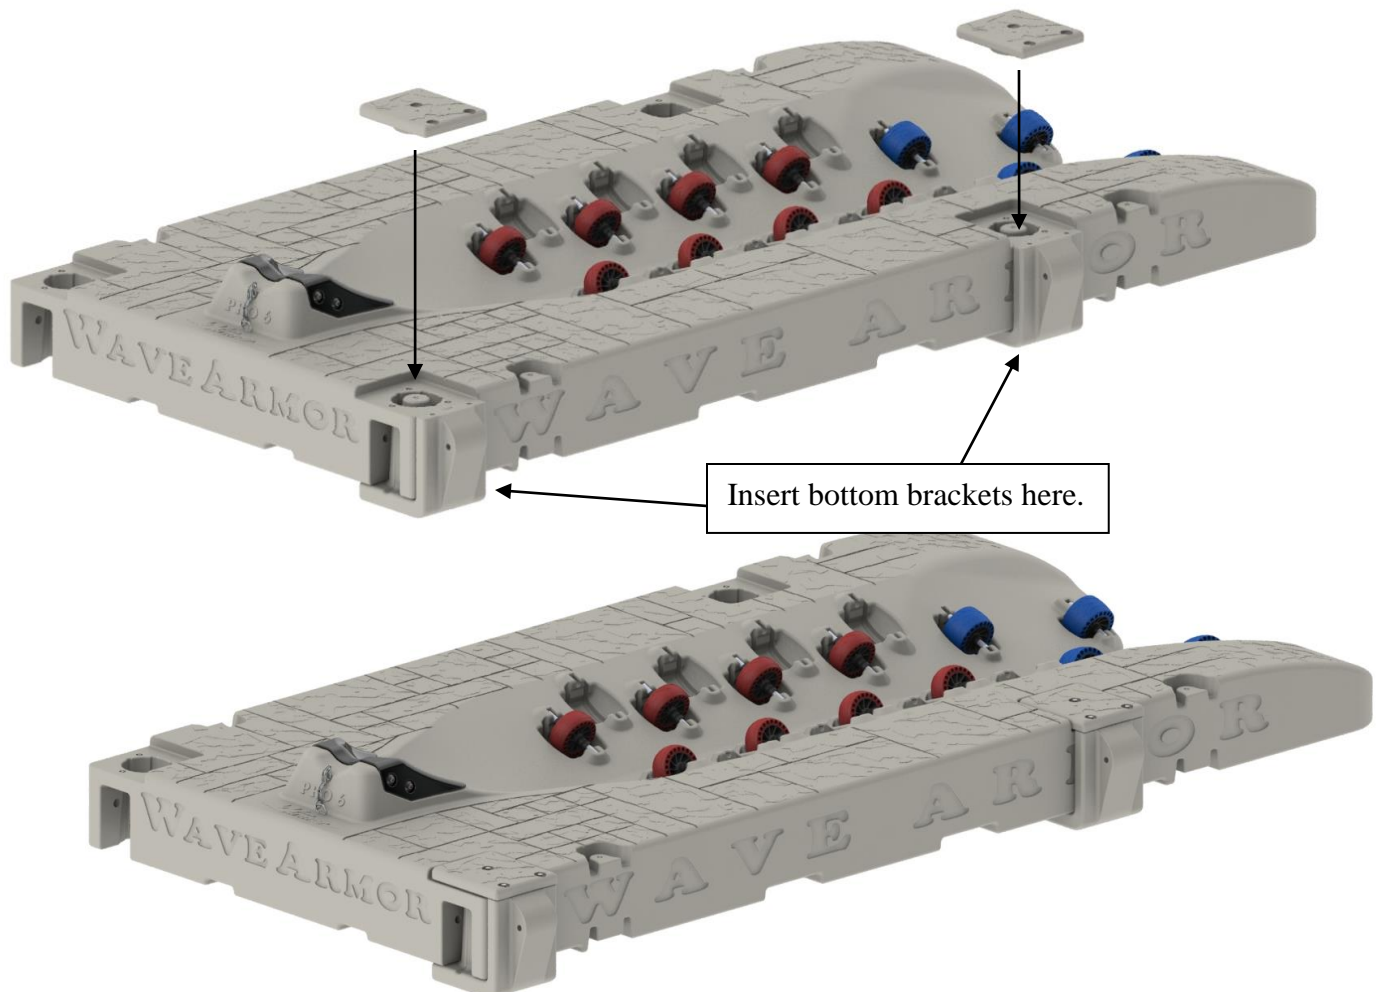

2. Attach galvanized steel bracket to the dock using at least four of the holes in each bracket if possible. Use the necessary hardware for the dock (not supplied). The brackets need to be placed the correct distance apart so they line up with the plastic brackets on the port.
3. Slide port up against the dock so it aligns with the steel brackets. Secure port to the brackets using the $\frac{1}{2}$ x 7" bolts, washers and nylock nuts.

