



PRODUCT ASSEMBLY INSTRUCTIONS:




www.wavearmor.com

Item # | Product Name: 301945 Genesis & Extreme Post Bracket 3"


Parts List:	Tools Needed:
1. Plastic Post Bracket qty 2	1. Ratchet and 9/16" socket
2. Plastic Connector Cap qty 4	2.
3. 3/8 x 1 1/2" bolt qty 8, 3/8" lock washer qty 8, 3/8" heavy washer qty 8	3.
4.	4.
5.	5.

Assembly Instructions:

1. Line up post bracket with recessed area on the side of the port in desired position as shown below. Post bracket will fit into slots on the bottom side of port.

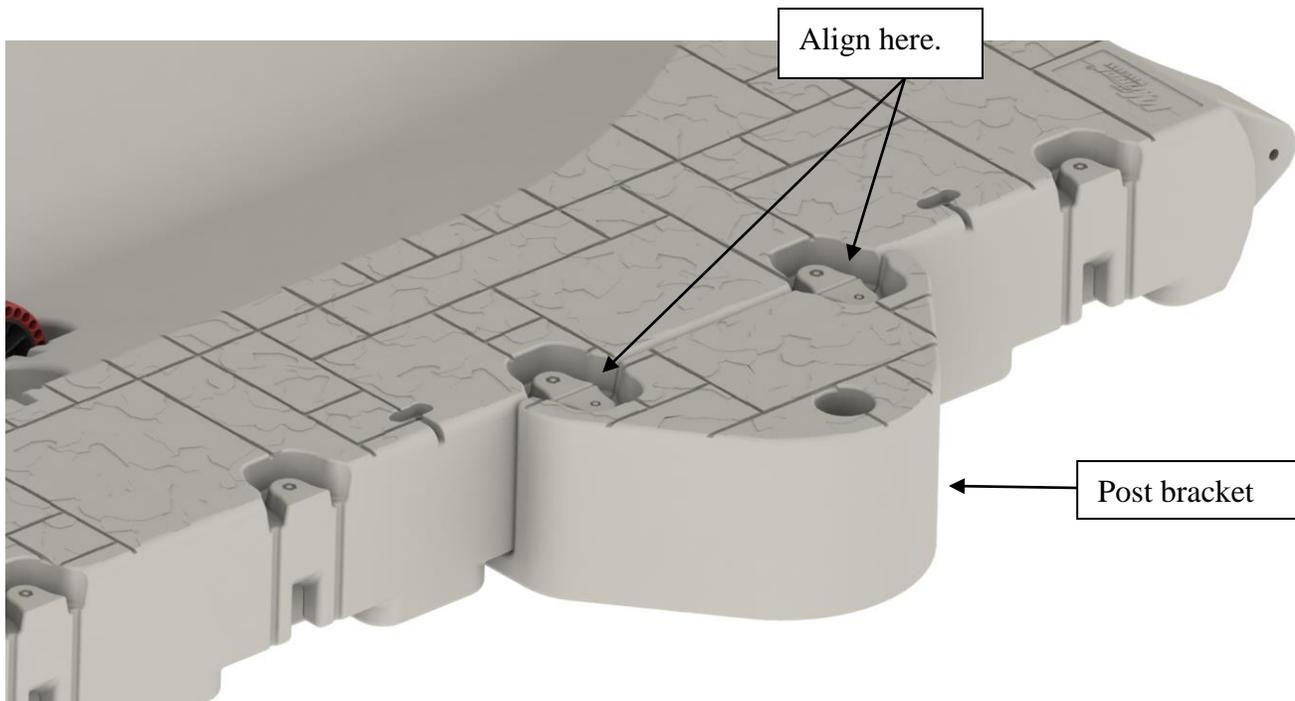

2. Install cap connectors into the recessed areas on the bracket and the port. Secure with the 1 1/2" bolts, lock washers and heavy washers.

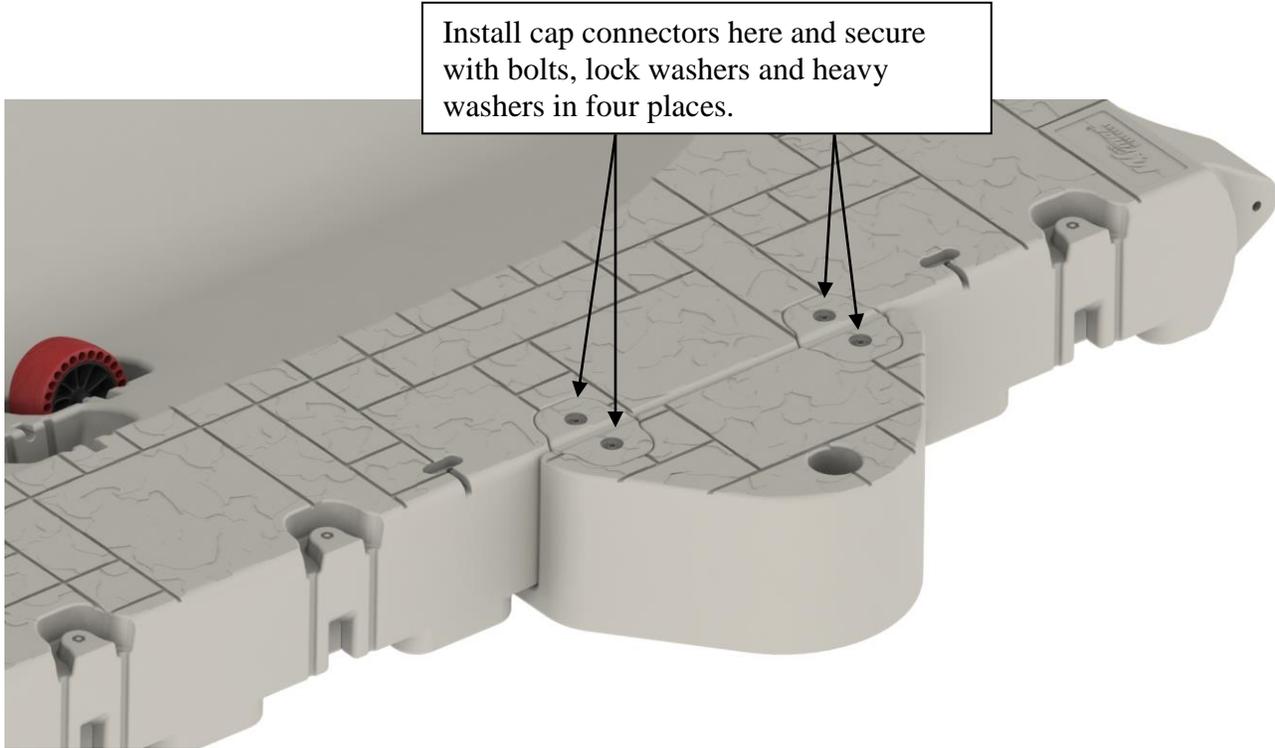

3. Install posts through the hole in the post bracket. Repeat for second bracket.

