



PRODUCT ASSEMBLY INSTRUCTIONS:




www.wavearmor.com

Item # | Product Name: #302214 Slim 2" Post Attachment with Utility Channel



Parts List:	Tools Needed:
1. Plastic Slim 2" Post Attachment, Qty 2	1. Ratchet with short extension and 9/16" socket
2. Two Hardware Bags each containing a 3/8 x 2" bolt qty 1, lock washer qty 1, heavy washer qty 1	2. Hammer or Mallet
3.	3. Lubricant (optional)
4.	4.
5.	5.
6.	6.
7.	7.

Assembly Instructions: (Post attachment without utility channel shown, installation is the same)

- Slide post attachment into the opening on the dock as shown below. Drive the post attachment down the slot to the desired location. Insert the 3/8 x 2" bolt, lock washer, and heavy washer into the slot on the dock deck. Thread the bolt into the threaded insert in the top of the post attachment. Tighten securely.

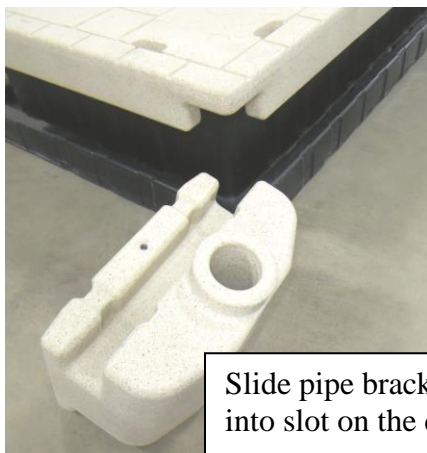

Slide pipe bracket into slot on the dock.

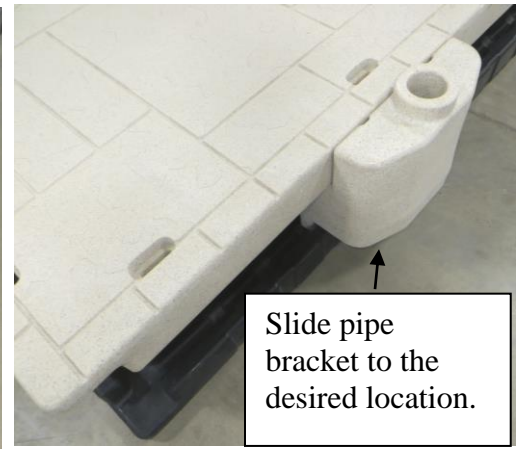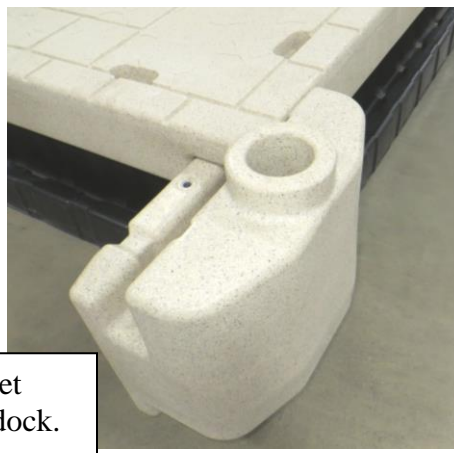

Slide pipe bracket to the desired location.



Line up threaded insert with slot.



Secure bolt with washers here.