



# PRODUCT ASSEMBLY INSTRUCTIONS:




wavearmor.com

**Item # | Product Name:** #302102 Pro Port to Pro Port Connector Kit


Parts List:	Tools Needed:
1. Bottom Connector, qty 2	1. Ratchet and 9/16" socket
2. Top Connector qty 2	2.
3. Hardware Bag containing: 3/8 x 2" bolt qty 4, lock washer qty 4, heavy washer qty 4	3.
4.	4.
5.	5.
6.	6.

### Assembly Instructions:


1. Line up the two ports side by side and insert the bottom connectors as shown below.

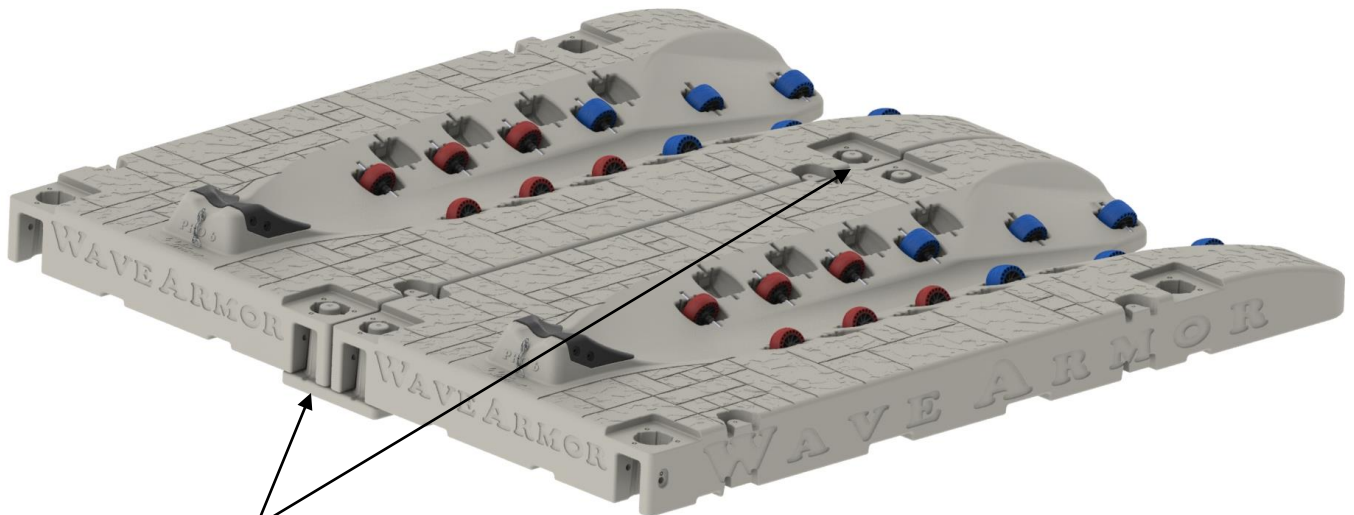

Bottom connectors are installed here.

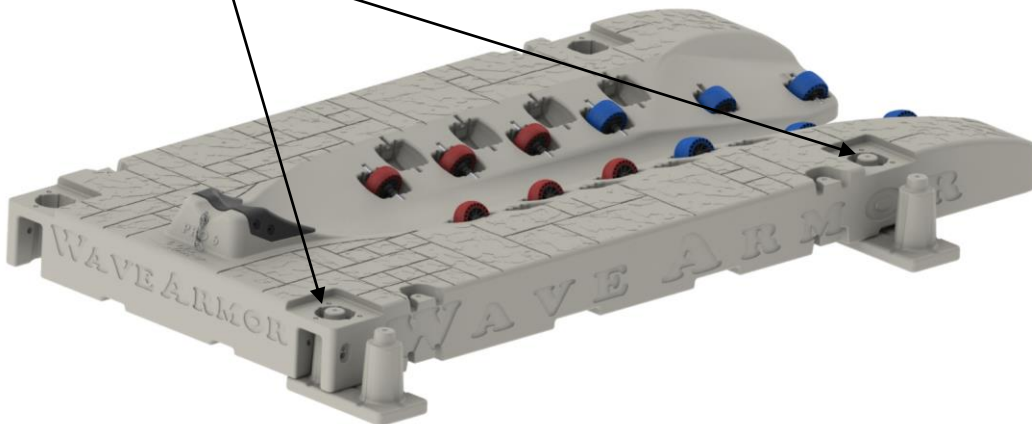

2. Install the top connectors as shown below.

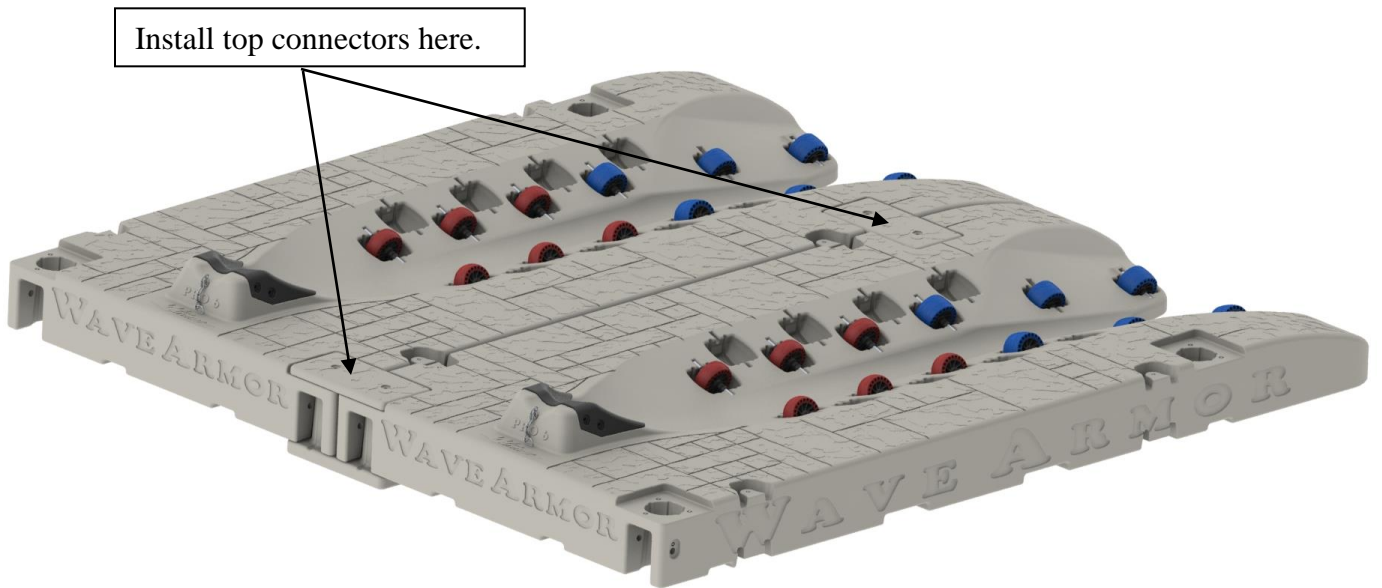

3. Line up the holes in the top connectors with the threaded inserts in the bottom connectors. Secure the top connectors to the bottom connectors with the 3/8 x 2" bolts, lock washers and heavy washers.

