



PRODUCT ASSEMBLY INSTRUCTIONS:




www.wavearmor.com

Item # | Product Name: 302473 Pro Port Corner Extension for Side Deck

Parts List:	Tools Needed:
1. Plastic Bottom Connector qty 2	1. Ratchet and 9/16" socket
2. Plastic Top Connector qty 2	2.
3. Corner Extension for Side Deck	3.
4. 3/8 x 1 3/4" bolt qty 4, 3/8" lock washer qty 4, 3/8" heavy washer qty 4	4.
5.	5.
6.	6.
7.	7.

Assembly Instructions: Designed for use with an extension deck on the side and at the front.


1. Move the corner extension into place at the front of the side extension and port. Also required is the front extension deck (sold separately).

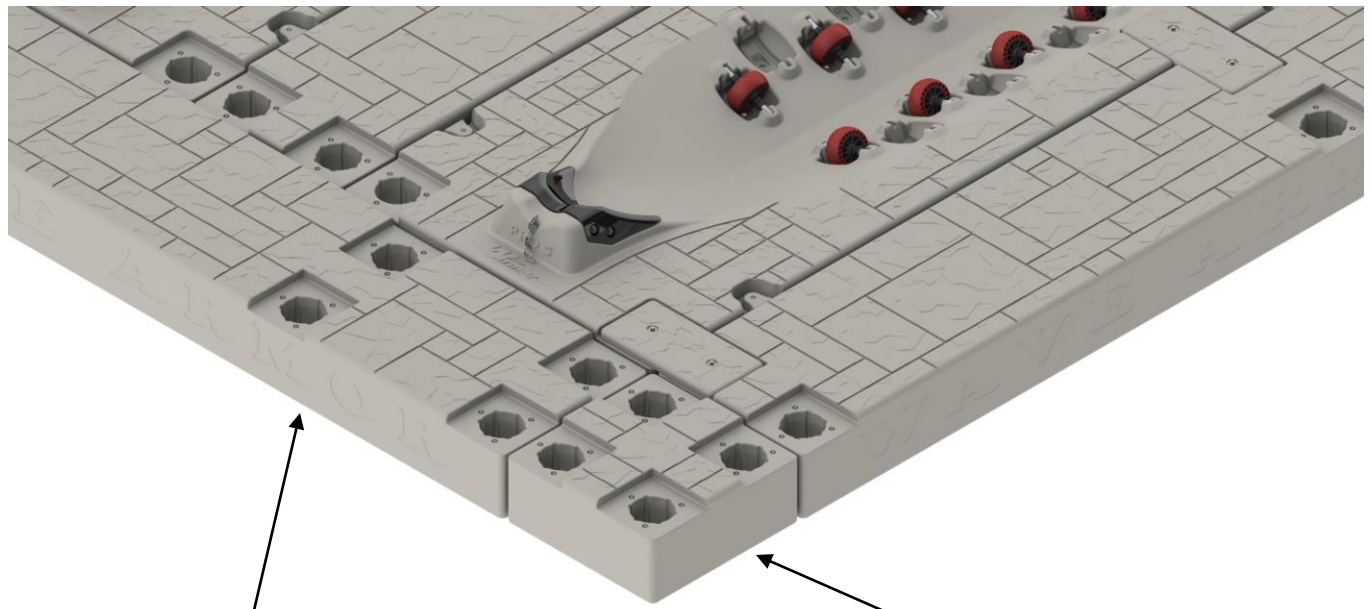

Additional front/side deck will go here.

Place corner section here.

2. Insert bottom connectors in three places from underneath.

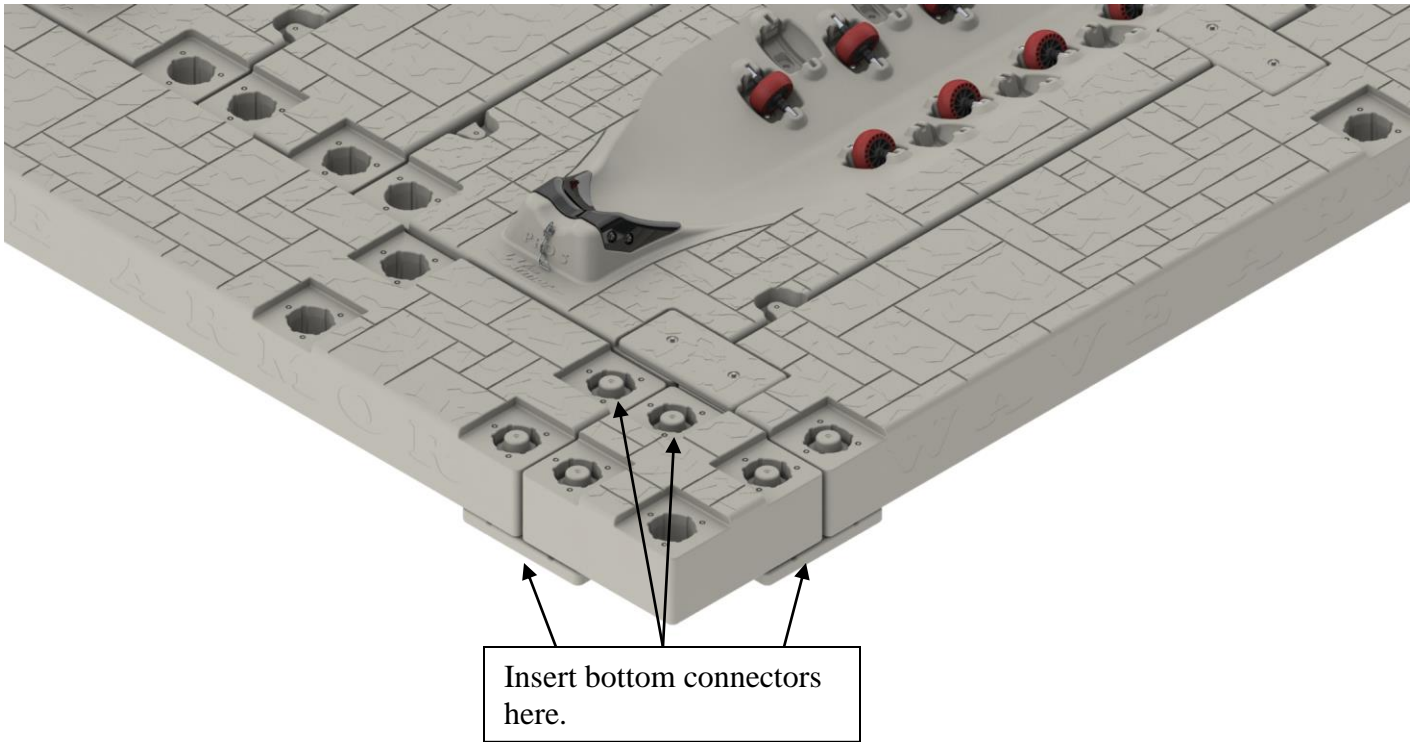

3. Secure the corner section to both the side and front extension decks with the 3/8 x 1 3/4" bolts, lock washers and heavy washers. Repeat the process on the other end of the front deck extension to complete the attachment. Each corner section and side/front extension are sold separately.

